



User Guideline Ultracur3D® RG 50

The following User guideline is for professionals who use: Ultracur3D® RG 50.

The safety data given in this publication is for information purposes only and does not constitute a legally binding Material Safety Data Sheet (MSDS). The relevant MSDS can be obtained upon request from your supplier or you may contact BASF directly at <u>sales@basf-3dps.com</u>. **For more information, please refer to the country specific MSDS for advice.**

Manufacturer

BASF 3D Printing Solutions GmbH 69115 Heidelberg GERMANY E-mail address: <u>sales@basf-3dps.com</u>

http://www.forward-am.com/

Storage Conditions and Disposal Considerations

Keep container tightly closed in a room temperature, well-ventilated place. Keep container dry. If Material is not being used fill it back through a filter in the corresponding material bottle. The filter prevents to fill cured pieces or failed prints back into the bottle. Ultracur3D[®] RG 50 must be disposed of or incinerated in accordance with local regulations.

For more information, please refer to the country specific MSDS for advice.

Delivery units


Ultracur3D[®] RG 50 is available in the following packaging sizes: 1 kg, 5 kg (available soon), 10 kg and possible larger volume packaging are also available upon request.

Intendent Use

Ultracur3D[®] RG 50 is a technical material based on (meth-)acrylate resin for suggested SLA, LCD and DLP systems. Working wavelength: 355nm, 385 nm or 405 nm. Attached a list of suggest 3D printer and Printing parameters. For more information contact BASF directly at *sales@basf-3dps.com*.

The data contained in this publication are based on our current knowledge and experience. They do not constitute an agreed contractual quality of the product and, in view of the many factors that may affect processing and application of our products, do not relieve processors from carrying out their own investigations and tests. The agreed contractual quality of the product at the time of transfer of risk is based solely on the data in the specification data sheet. Any descriptions, drawings, photographs, data, proportions, weights, etc. given in this publication may change without prior information. The customer and/or user is responsible to consider and respect all hazard and safety issues according to the MSDS of Ultracur3D® RG 50 and take, implement and/or install adequate measures and precautions to avoid any personal injuries, property damages and/or environmental pollution. Therefore, BASF3D Printing Solutions GmbH shall not be liable for any personal injury, property damages and/or environmental emissions arising out of or related to the testing, handling or usage, storage and possession of Ultracur3D® RG 50. It is the sole responsibility of the recipient of our product to ensure that any proprietary rights and existing laws and legislation are observed (02/2020) Version 2.1

BASF 3D Printing Solutions GmbH




BASF We create chemistry

Example of Suitable 3D-Printers and Settings

PRINTER	MIICRAFT ULTRA 125	MIICRAFT ULTRA 125	ULTRACRAFT A2 (HEYGEARS)	ULTRACRAFT A2 (HEYGEARS)
Wavelength	405 nm	405 nm	385 nm	385 nm
Power	4.5 mW / cm²	4.5 mW / cm ²	2.1 mW / cm ²	2.1 mW / cm ²
Curing time	4.5 s	2.2 s	7.5 s	4.25 s
Voxel depth	100 µm	50 µm	100 µm	50 µm

Printing Process

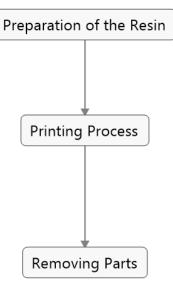

The material should be processed at room temperature. Before usage the material should be shaken well. Pour it slowly in the vat and wait a couple minutes, until smooth, bubble-free surface is obtained before starting the print job.

As the suitable 3D printer examples and setting parameters stated above are only for general guidance purpose, user should always define the optimal settings according to his needs by himself. Please refer to Instruction of Use or User Guide of the employed 3D-Printer for the printer settings and handling.

Remove the parts carefully from the build platform with a suite able tool, for more information see the Instruction for Use of the used 3D-Printer.

The data contained in this publication are based on our current knowledge and experience. They do not constitute an agreed contractual quality of the product and, in view of the many factors that may affect processing and application of our products, do not relieve processors from carrying out their own investigations and tests. The agreed contractual quality of the product at the time of transfer of risk is based solely on the data in the specification data sheet. Any descriptions, drawings, photographs, data, proportions, weights, etc. given in this publication may change without prior information. The customer and/or user is responsible to consider and respect all hazard and safety issues according to the MSDS of Ultracur3D® RG 50 and take, implement and/or install adequate measures and precautions to avoid any personal injuries, property damages and/or environmental pollution. Therefore, BASF3D Printing Solutions GmbH shall not be liable for any personal injury, property damages and/or environmental emissions arising out of or related to the testing, handling or usage, storage and possession of Ultracur3D® RG 50. It is the sole responsibility of the recipient of our product to ensure that any proprietary rights and existing laws and legislation are observed (02/2020) Version 2.1

BASF 3D Printing Solutions GmbH







Cleaning and Post-curing process

Cleaning Process	Ultracur3D [®] RG 50 can be cleaned with dest. Water as well as with ResinAway (Monocure 3D) & 2-propanol, please refer to either one for the following cleaning procedures.
	Cleaning with dest. Water
	<i>Step 1:</i> Place the parts in a container filled with used dest. Water and in an Ultrasonic bath filled with Water for 3 minutes.
	Step 2: Rinse the parts with dest. Water for a few seconds. Fine structures or holes may be better cleaned by using dest. water and a syringe or by separate brushing. The parts should be placed afterwards in a container filled with fresh dest. Water and subsequently treated in an ultrasonic bath filled with water for 2 minutes.
	<i>Step 3:</i> Blow dry the parts with pressure air/nitrogen, until the parts are clean.
	Cleaning with ResinAway & 2-propanol
	<i>Step 1:</i> Place the parts in a container filled with ResinAway (Monocure 3D) and in an Ultrasonic bath filled with water for 2 minutes.
	Step 2: Rinse the parts with 2-propanol for a few seconds. Fine structures or holes may be better cleaned by using 2-propanol and a syringe or by separate brushing. The parts should be placed afterwards in a container filled with fresh 2-propanol and subsequently treated in an ultrasonic bath filled with water for 2 minutes.
	<i>Step 3:</i> Blow dry the parts with pressure air/nitrogen, until the parts are clean.
Drying	Place the parts into a warming cabinet @40°C for 30 minutes.

Drying

Place the parts into a warming cabinet @40°C for 30 minutes.

The data contained in this publication are based on our current knowledge and experience. They do not constitute an agreed contractual quality of the product and, in view of the many factors that may affect processing and application of our products, do not relieve processors from carrying out their own investigations and tests. The agreed contractual quality of the product at the time of transfer of risk is based solely on the data in the specification data sheet. Any descriptions, drawings, photographs, data, proportions, weights, etc. given in this publication may change without prior information. The customer and/or user is responsible to consider and respect all hazard and safety issues according to the MSDS of Ultracur3D® RG 50 and take, implement and/or install adequate measures and precautions to avoid any personal injuries, property damages and/or environmental pollution. Therefore, BASF3D Printing Solutions GmbH shall not be liable for any personal injury, property damages and/or environmental emissions arising out of or related to the testing, handling or usage, storage and possession of Ultracur3D® RG 50. It is the sole responsibility of the recipient of our product to ensure that any proprietary rights and existing laws and legislation are observed (02/2020) Version 2.1

BASF 3D Printing Solutions GmbH

sales@basf-3dps.com





Post curing

Ultracur3D[®] RG 50 parts require adequate post curing to achieve the optimized final mechanical properties. After each post-curing cycle, the part needs to be flipped to achieve an even curing.

Examples of post curing procedures

MiiCraft Ultra 125

Post-curing unit	Otoflash G171	Dymax ECE 2000 flood	
Amount of cycles	2	2	
Duration of one curing cycle	1000 Flashes	120 seconds	

UltraCraft A2 (HEYGEARS)

Post-curing unit	Otoflash G171	Dymax ECE 2000 flood	
Amount of cycles	2	2	
Duration of one curing cycle	500 Flashes	90 seconds	



Remove, if necessary, support structures and smoothing the surface.

These proceedings are only general guidelines, the optimal printing settings as well as curing time must be defined by the user himself. The post-curing might differ by using different 3D-Printers and different post-curing units may require different settings.

The data contained in this publication are based on our current knowledge and experience. They do not constitute an agreed contractual quality of the product and, in view of the many factors that may affect processing and application of our products, do not relieve processors from carrying out their own investigations and tests. The agreed contractual quality of the product at the time of transfer of risk is based solely on the data in the specification data sheet. Any descriptions, drawings, photographs, data, proportions, weights, etc. given in this publication may change without prior information. The customer and/or user is responsible to consider and respect all hazard and safety issues according to the MSDS of Ultracur3D® RG 50 and take, implement and/or install adequate measures and precautions to avoid any personal injuries, property damages and/or environmental pollution. Therefore, BASF3D Printing Solutions GmbH shall not be liable for any personal injury, property damages and/or environmental emissions arising out of or related to the testing, handling or usage, storage and possession of Ultracur3D® RG 50. It is the sole responsibility of the recipient of our product to ensure that any proprietary rights and existing laws and legislation are observed (02/2020) Version 2.1

BASF 3D Printing Solutions GmbH

